


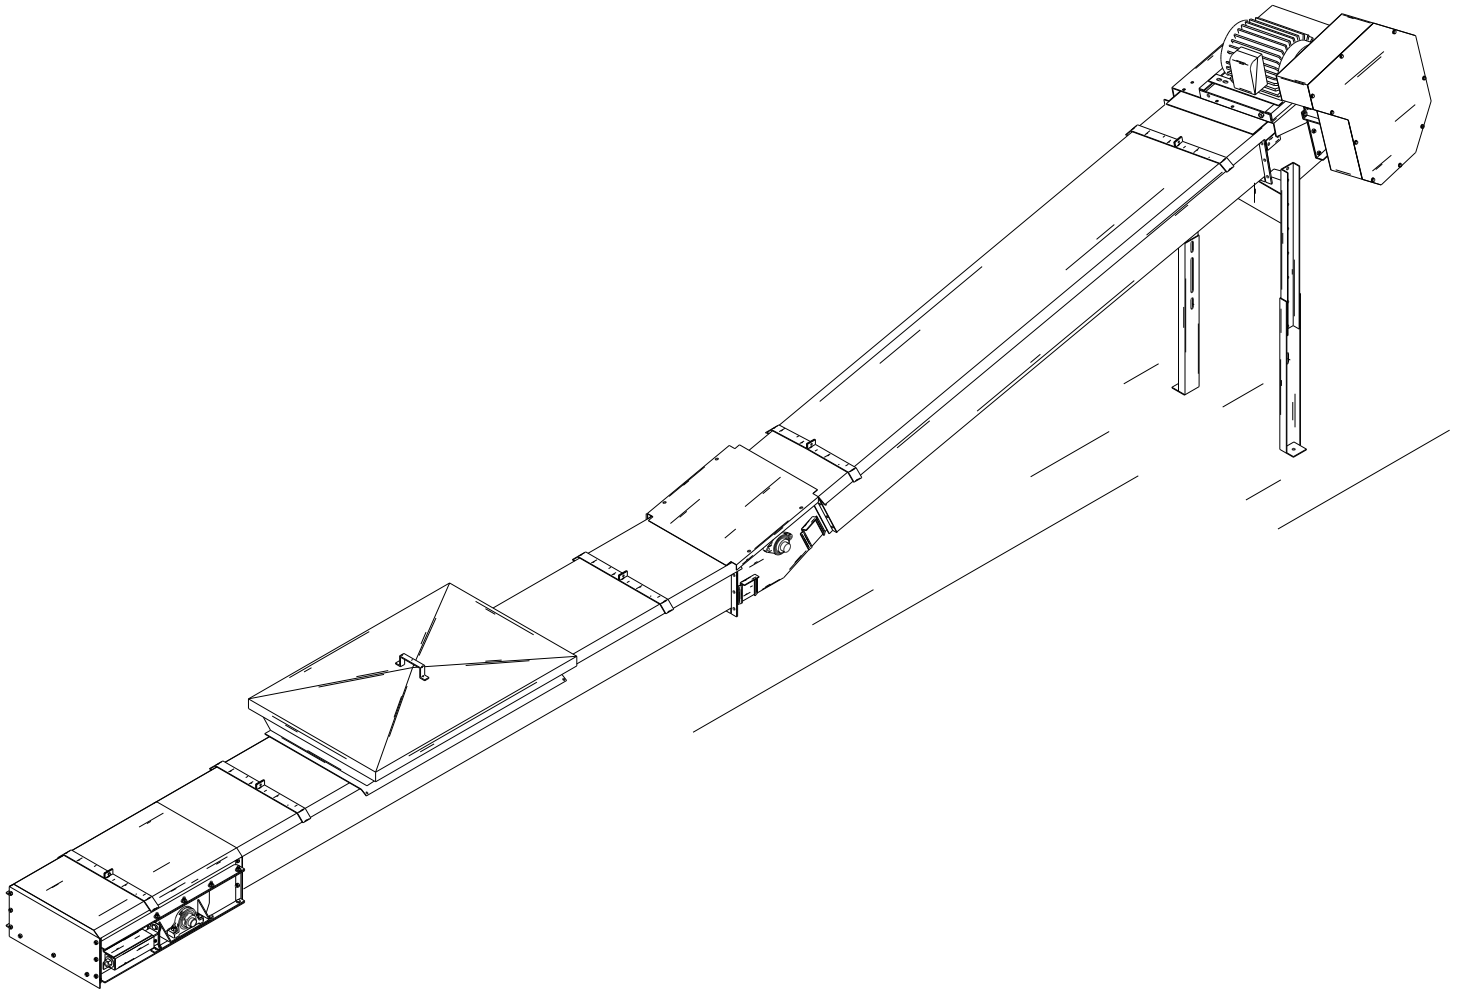

CHAIN BELT CONVEYORS


REPAIR PARTS

Contents

Head Assembly - Shaft Mount Drive	2-3
Drive Sprocket Assembly - Shaft Mount	3
Head Assembly - Jackshaft Mount Drive	4-5
Drive Sprocket Assembly - Jackshaft Mount Drive	5
Transitions	6
Tail Assembly	7
Truck Dump Hopper	8
Rail Dump Hopper	8
Spout	8
Chain Belt Sections	9
Stand Box	9

Head Repair Parts

Shaft Mount Drive

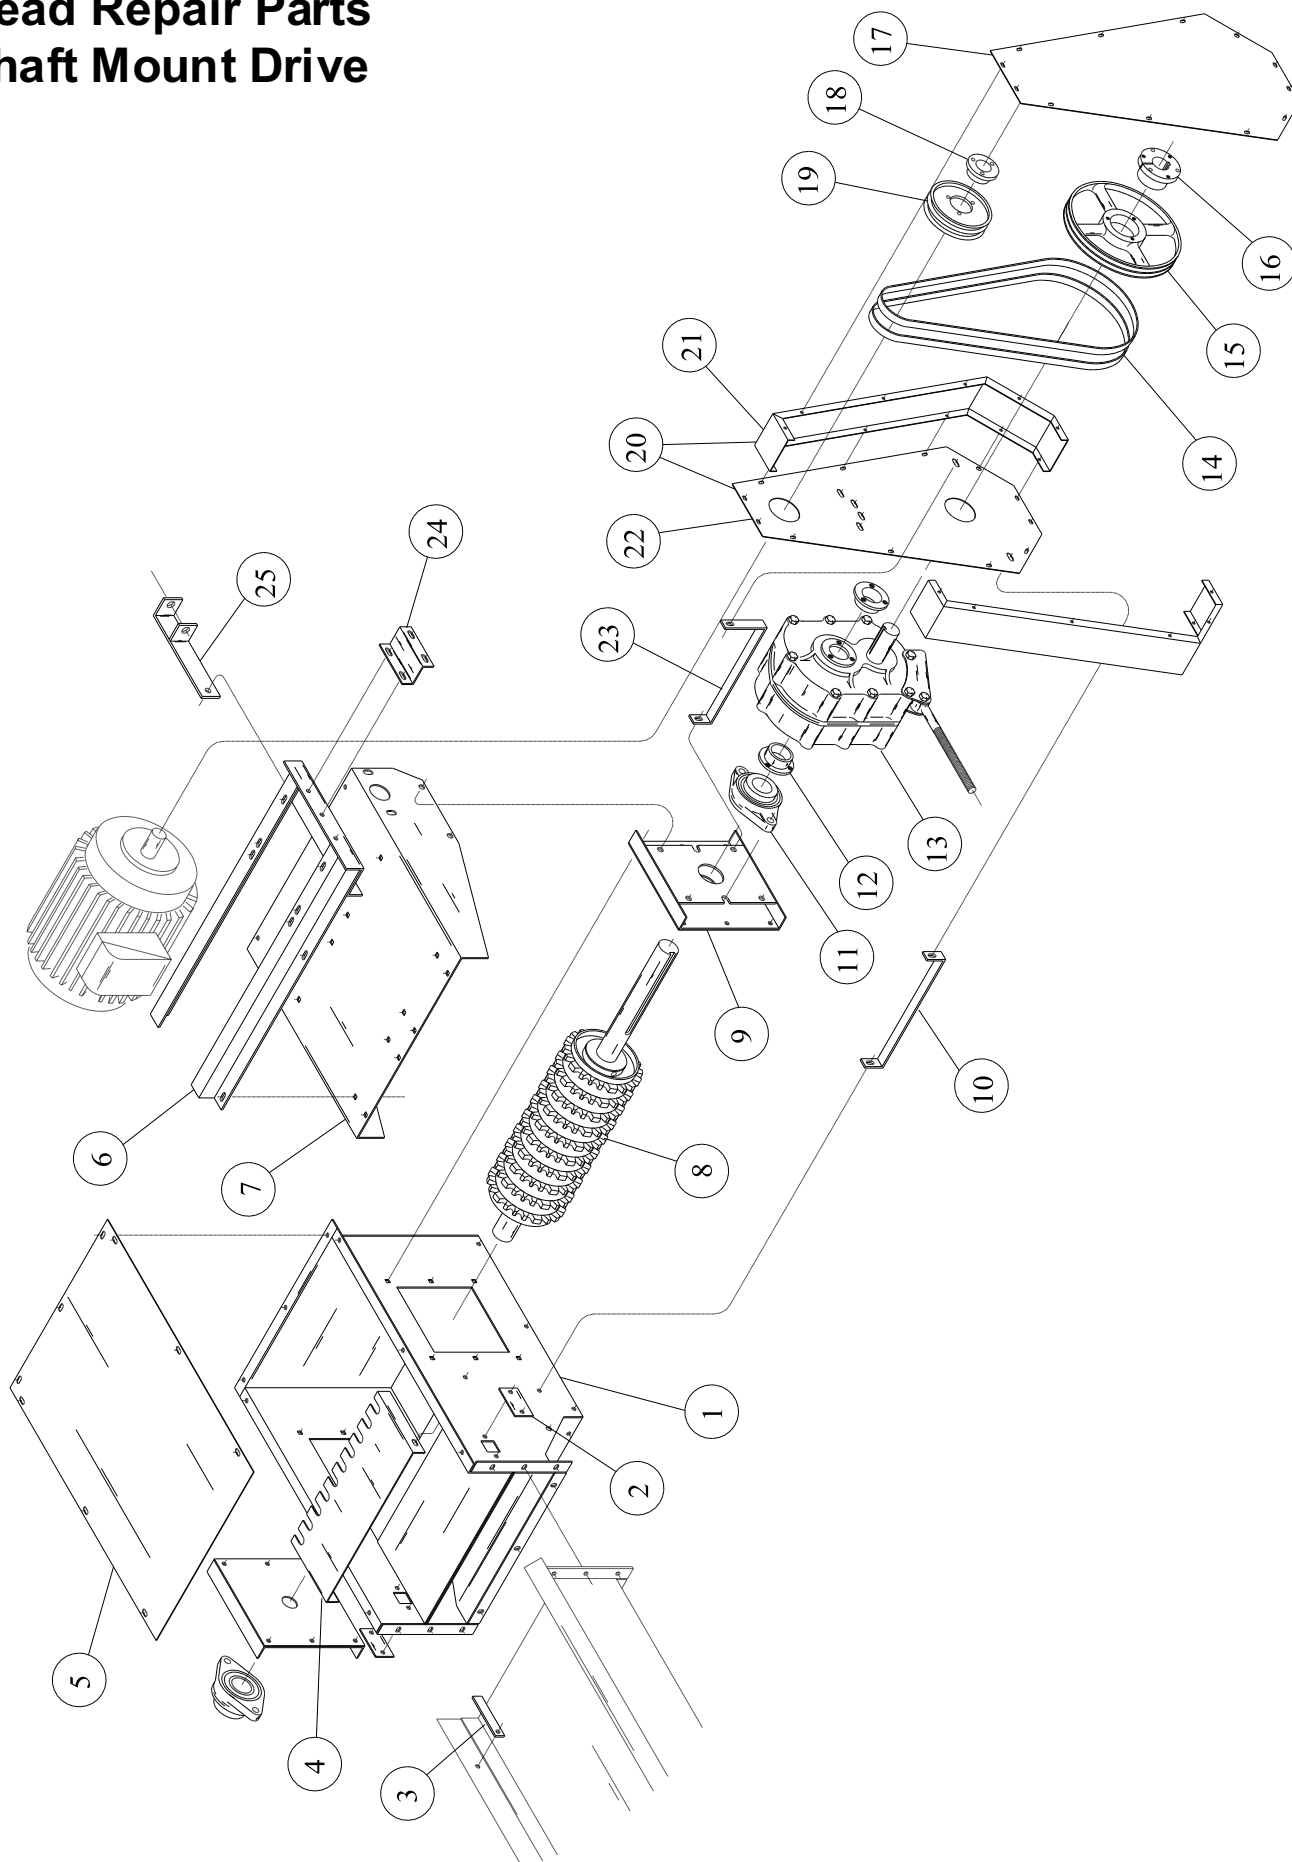

Head Repair Parts


Shaft Mount Drive

Item	Qty	Part No.	Description
1	1	81721300	Head Frame Weldment
2	2	10166700	Adjustment Seal
3	2	10167500	Chain Stop
4	1	15775000	Slide Pan
5	1	15782600	Head Frame Cover
6	1	81725400	Motor Mount Weldment
7	1	81723900	Jackshaft Mount Weldment
8	1	62051800	Drive Sprocket Assembly
9	2	62049200	Bearing Mount Assembly
10	1	15895600	Belt Guard Strap
11	2	03011400	Bearing 1 15/16" 2B Flange
12	1	06000400	Reducer Bushing
13	1	06091300	Reducer Dodge TXT305

Item	Qty	Part No.	Description
14	2	01395300	V-Belt B- 62
15	1	00412700	Sheave 2B11.0 SK
16	1	01855600	Bushing 1 5/8" SK QD
17	1	15793300	Belt Guard Front
18	1	04374500	Bushing 1 3/8" SH QD
19	1	04406500	Sheave 2B 4.2 SH
20	1	62052600	Belt Guard Assembly Includes Items # 21 & #22
21	1	15791700	Belt Guard Back
22	2	15789100	Belt Guard Side
23	1	15896400	Belt Guard Strap
24	1	15783400	Belt Guard Bracket
25	1	80504400	Torque Arm


Drive Sprocket Assembly

Shaft Mount Drive

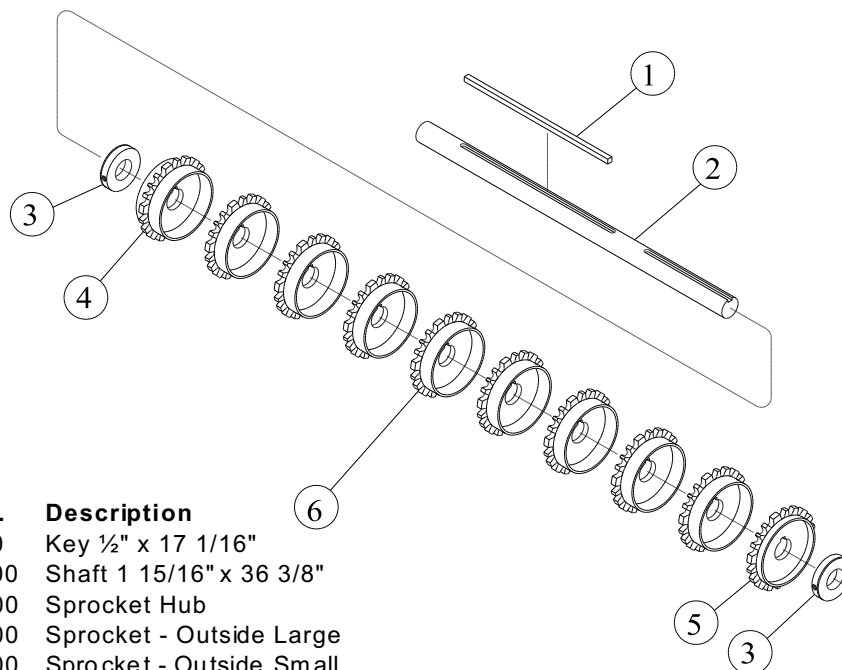

Item	Qty	Part No.	Description
1	1	1017400	Key 1/2" x 17 1/16"
2	1	15779200	Shaft 1 15/16" x 36 3/8"
3	2	10142800	Sprocket Hub
4	1	80533300	Sprocket - Outside Large
5	1	80532500	Sprocket - Outside Small
6	8	80531700	Sprocket Inside

Head Repair Parts Jackshaft Mount

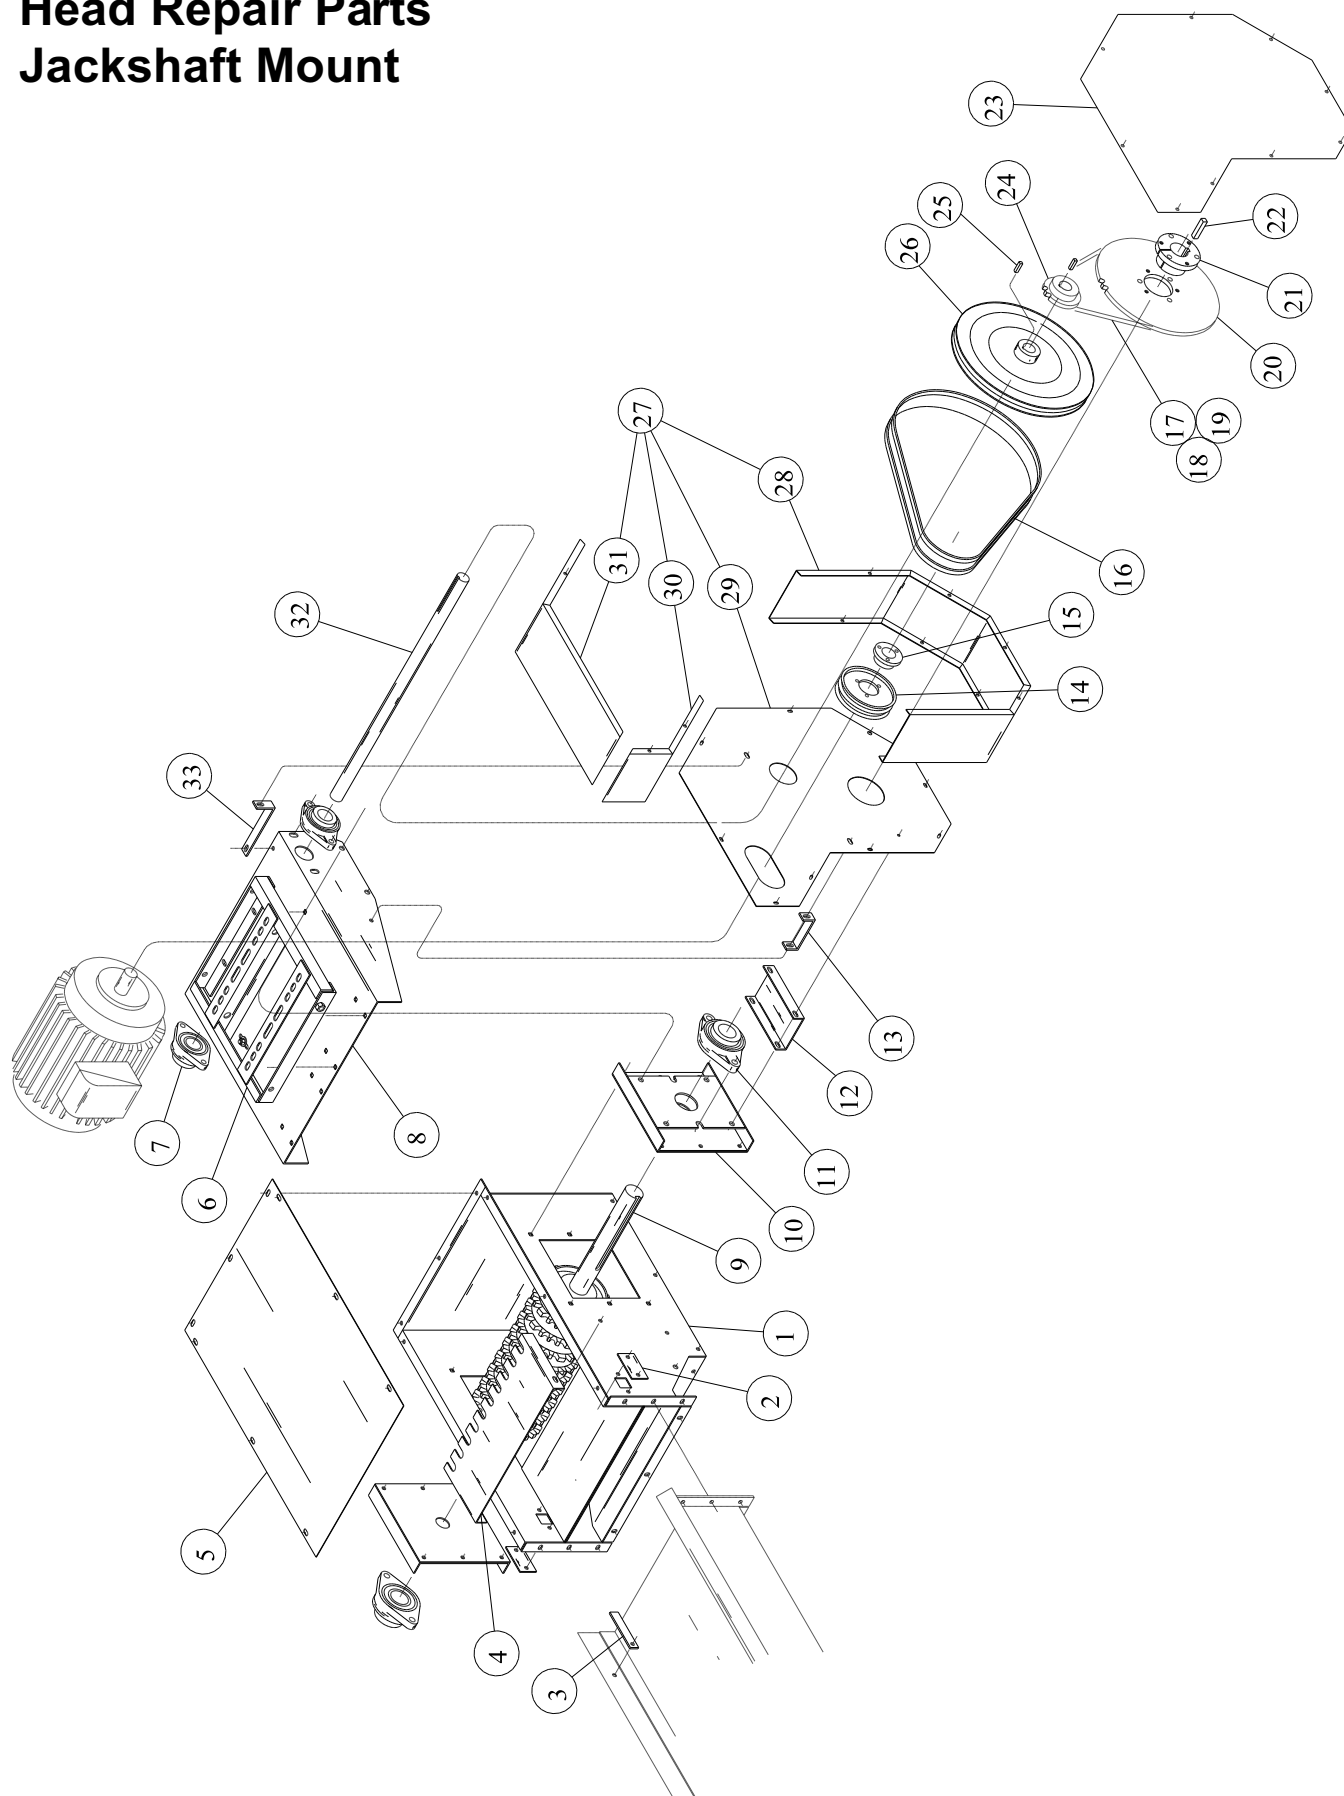


Head Repair Parts Jackshaft Mount

Item	Qty	Part No.	Description
1	1	81721300	Head Frame Weldment
2	2	10166700	Adjustment Seal
3	2	10167500	Chain Stop
4	1	15775000	Slide Pan
5	1	15782600	Head Frame Cover
6	1	60000700	Motor Mount Assembly
7	2	03018900	Bearing 1 5/16" 2B Flange
8	1	81723900	Jackshaft Mount Weldment
9	1	62075700	Drive Sprocket Assembly
10	2	62049200	Bearing Mount Assembly
11	2	03011400	Bearing 1 15/16" 2B Flange
12	1	15902000	Guard Bracket Bottom
13	1	15904600	Guard Bracket
14	1	04406500	Sheave 2B 4.2 SH
15	1	04374500	Bushing 1 3/8" SH QD
16	2	00042200	V-Belt B- 66
17	1	11766300	Chain #60 x 61 Pitches


Item	Qty	Part No.	Description
18	1	02044600	Chain #60 Connector Link
19	1	05215900	Chain #60 Offset Link
20	1	00416800	Sprocket #60 54T SF Bush
21	1	04417200	Bushing 1 15/16" SF QD
22	1	12857900	Key 1/2" x 2 3/8"
23	1	15931900	Guard Front
24	1	04554200	Sprocket #60B 15T 1 5/16"
25	2	10682300	Key 5/16" x 1 1/4"
26	1	04275400	Sheave 2B 15.0 1 5/16" B
27	1	62074000	Belt Guard Assembly (Includes Items #28-31)
28	1	15927700	Belt Guard Bottom Side
29	1	15930100	Belt Guard Belt
30	1	15929300	Belt Guard Side
31	1	15928500	Belt Guard Top Side
32	1	15941800	Shaft
33	1	15905300	Guard Bracket Top

Drive Sprocket Assembly Jackshaft Mount

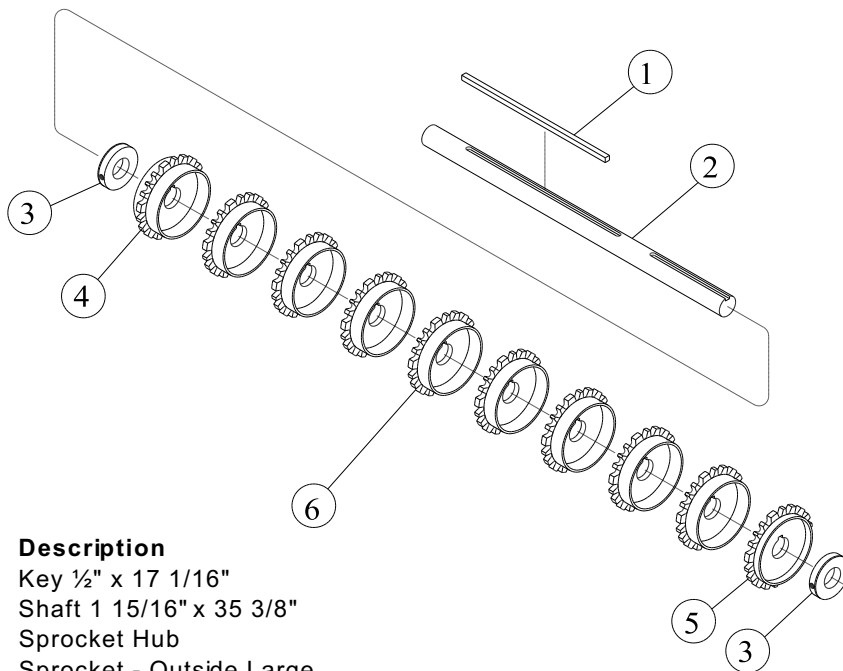

Item	Qty	Part No.	Description
1	1	1017400	Key 1/2" x 17 1/16"
2	1	15934300	Shaft 1 15/16" x 35 3/8"
3	2	10142800	Sprocket Hub
4	1	80533300	Sprocket - Outside Large
5	1	80532500	Sprocket - Outside Small
6	8	80531700	Sprocket Inside

Transition Repair Parts

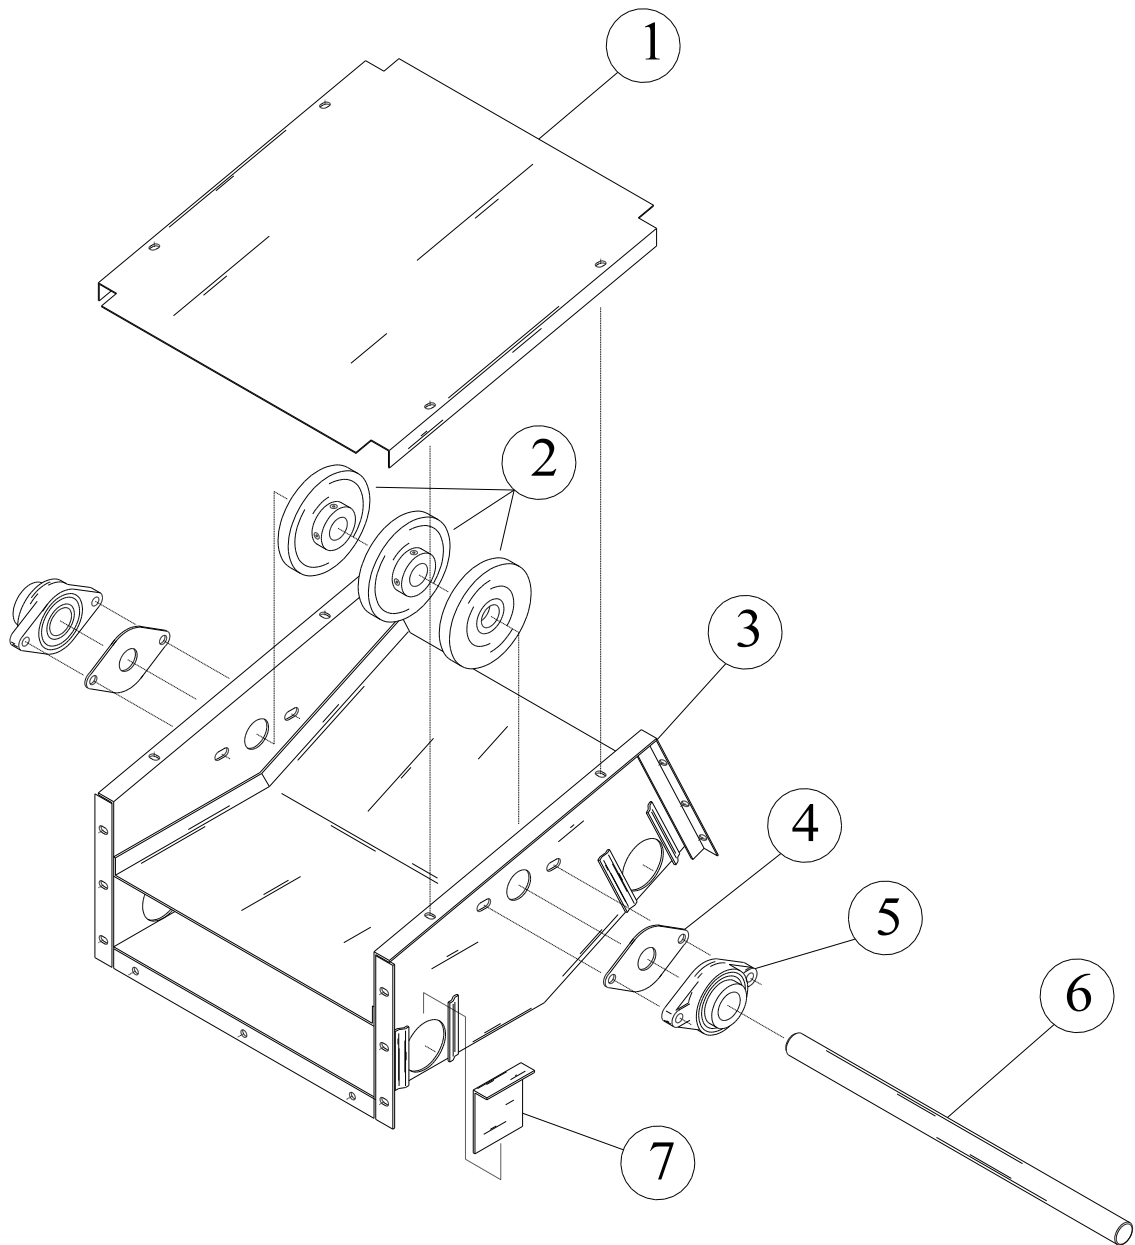


#60539400 25° Transition Assembly

Item	Qty	Part No.	Description
1	1	10178200	25° Cover
2	3	80530900	Hold Down Wheel Wa
3	1	80503600	25° Transition Section Wa
4	2	10174100	Bearing Seal
5	2	03018900	Brg 1.313 2B Flange
6	1	10133700	Shaft 1.313 x 24.250
7	4	12491700	Slide Plate

#61884300 30° Transition Assembly

Item	Qty	Part No.	Description
1	1	15323900	30° Cover
2	3	80530900	Hold Down Wheel Wa
3	1	81583700	30° Transition Section Wa
4	2	10174100	Bearing Seal
5	2	03018900	Brg 1.313 2B Flange
6	1	10133700	Shaft 1.313 x 24.250
7	4	12491700	Slide Plate


Take-up Repair Parts

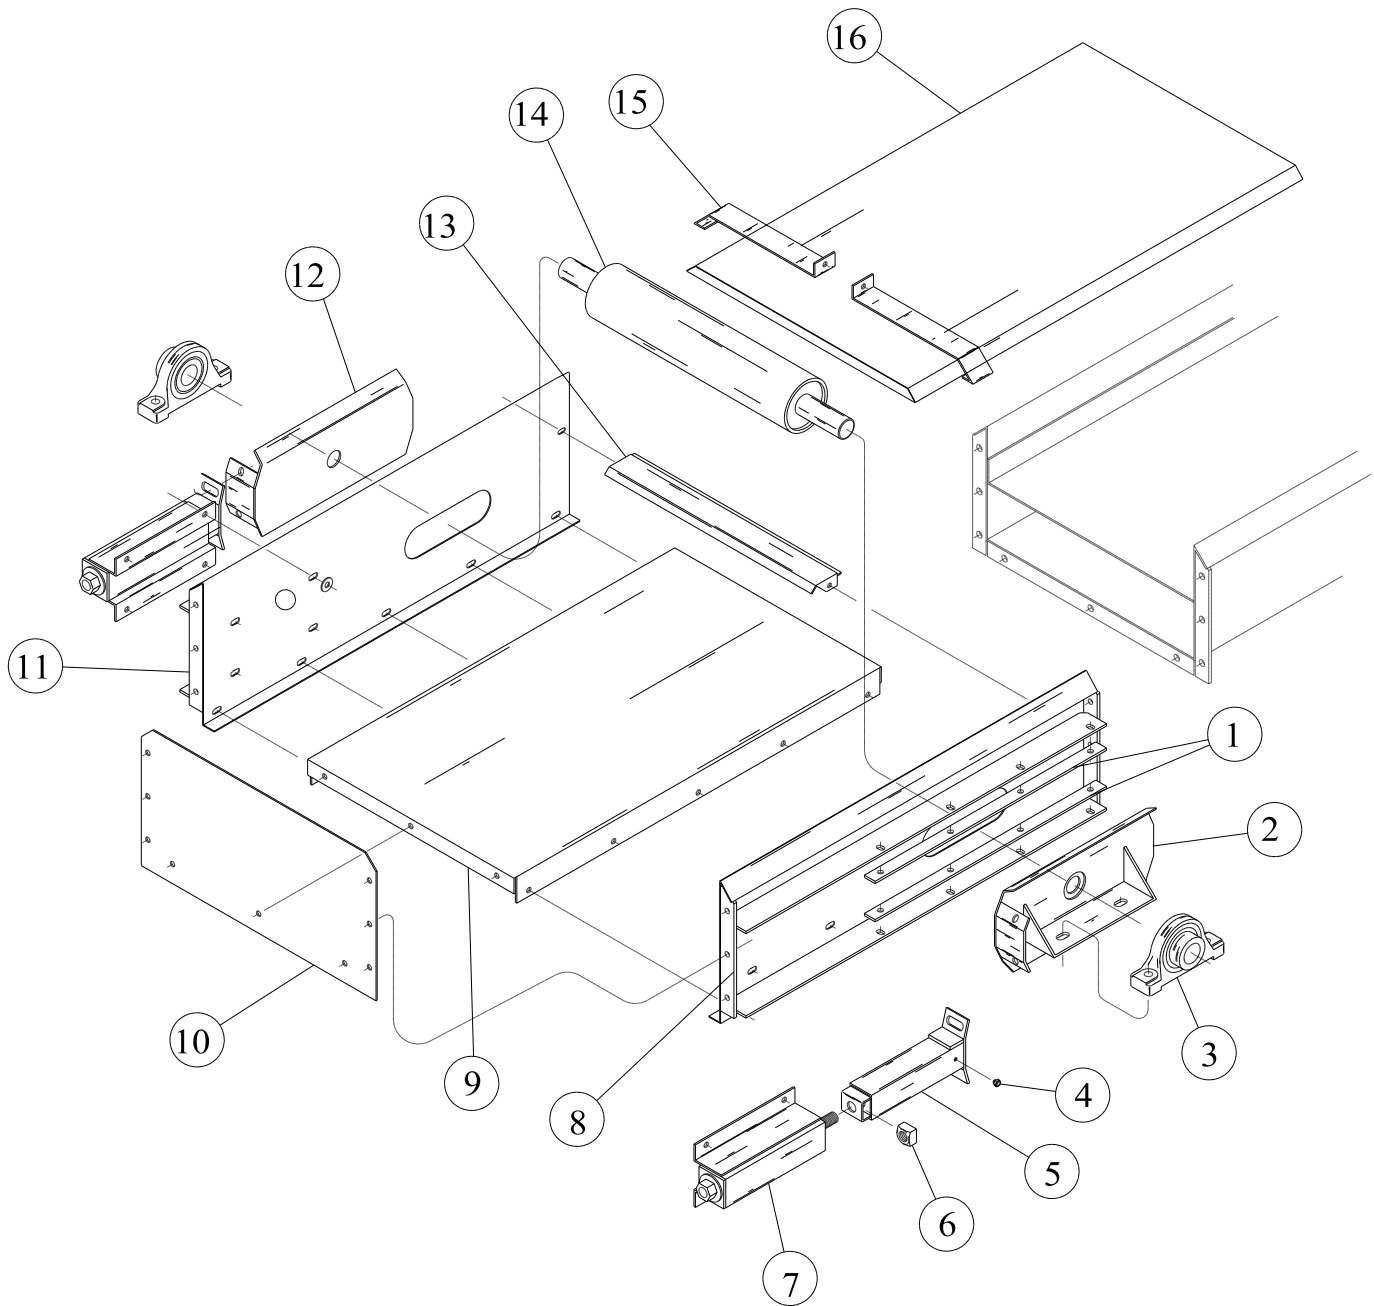

Item	Qty	Part No.	Description
1	4	15719800	Take-up Slide Support
2	1	62046800	Take-up Slide Assembly RH
3	2	03021300	Bearing 1½" Pillow Block
4	2	600346	Zerk 1/4-28 x 17/32"
5	2	81719700	Take-up Tube
6	2	01370600	Square Nut 3/4-10
7	2	81716300	Take-up Slide
8	1	81711400	Take-up Side RH

Item	Qty	Part No.	Description
9	1	15726300	Take-up Frame Bottom
10	1	15739600	Take-up Frame Front
11	1	81712200	Take-up Side LH
12	1	62071600	Take-up Slide Assembly LH
13	1	81720500	Chain Return
14	1	80508500	Tail Roller
15	2	10171700	Cover Strap
16	1	81748600	Take-up Cover

Hoppers

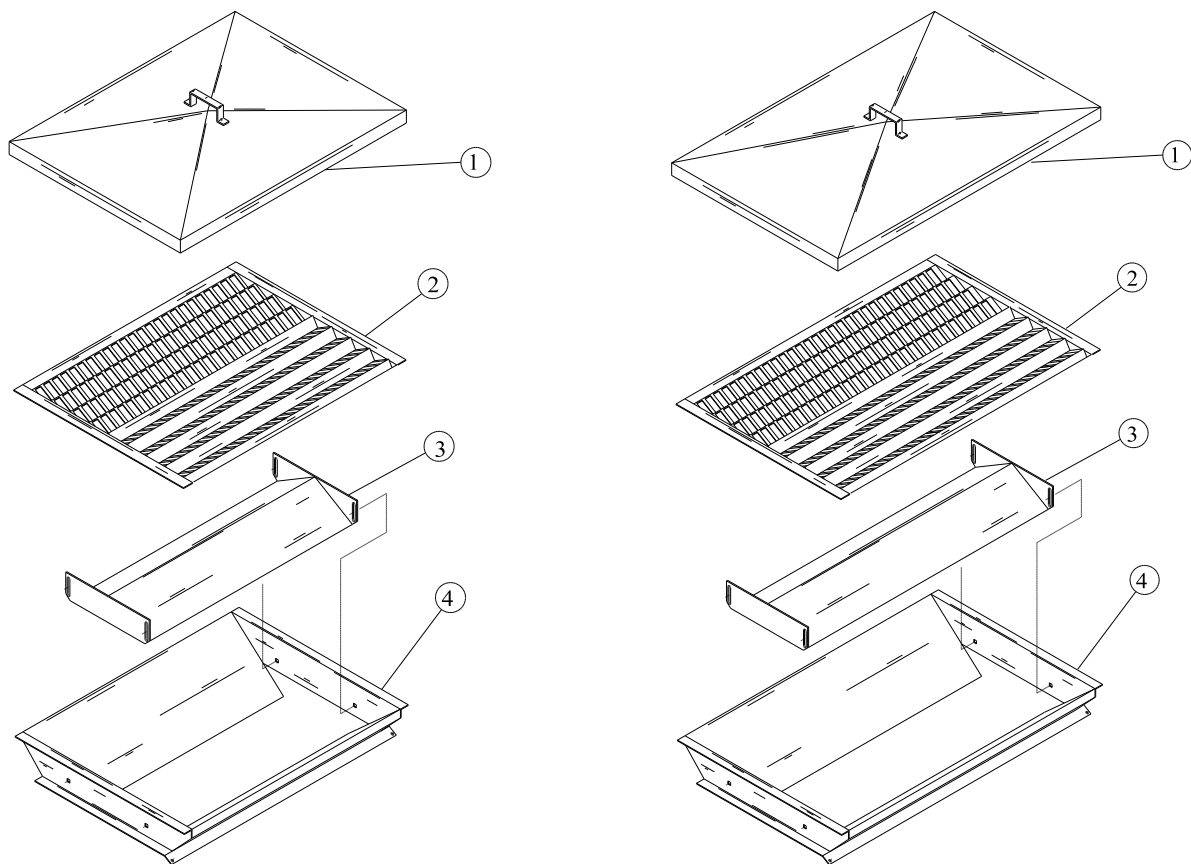


Truck Dump Repair Parts

Item	Qty	Part No.	Description
1	1	84262500	Weather Cover
2	1	84179100	Grate
3	1	80526700	Flo Control
4	1	80527500	Truck Dump Hopper

Rail Dump Repair Parts


Item	Qty	Part No.	Description
1	1	80535800	Weather Cover
2	1	84176700	Grate
3	1	80525900	Flo Control
4	1	80528300	Rail Dump Hopper

Spout #81751000

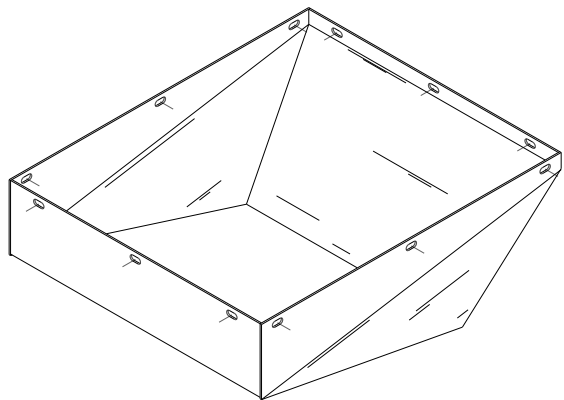

Chain Belt Sections

Repair Parts

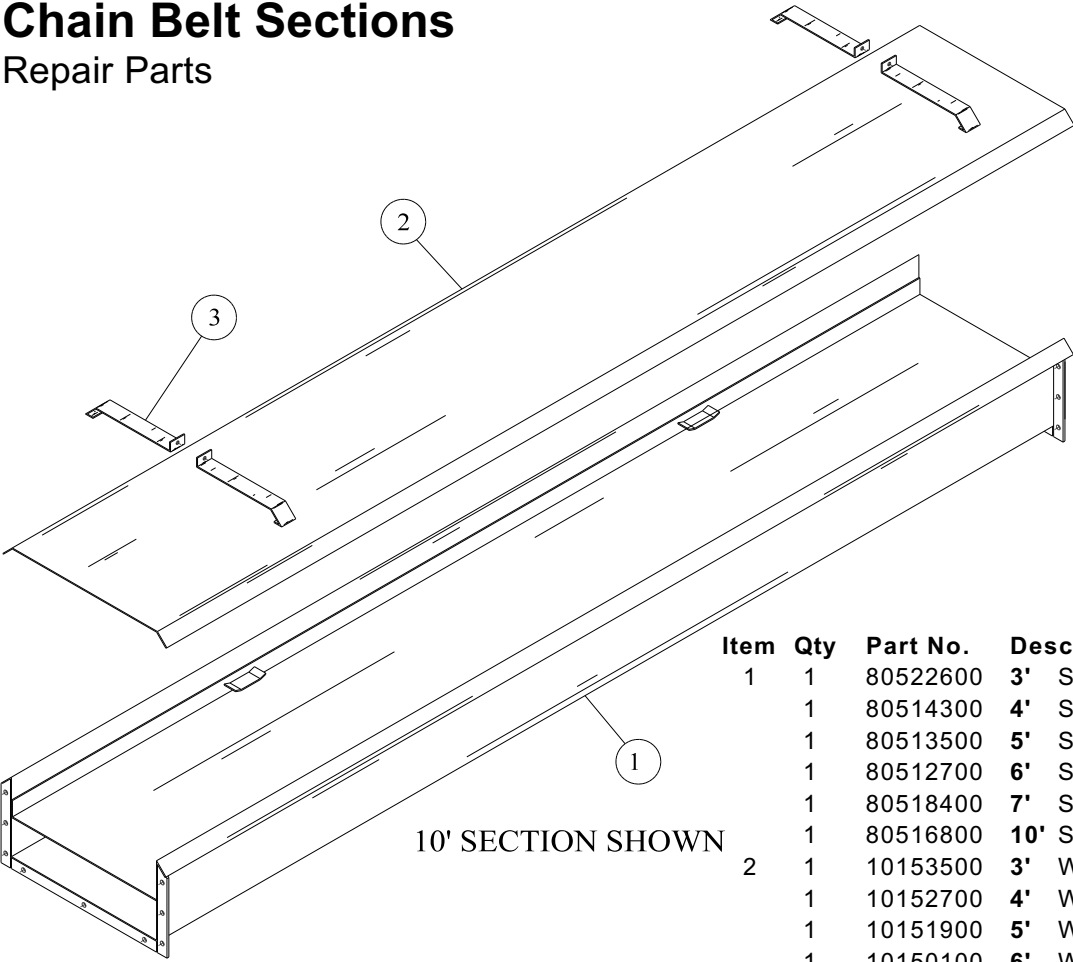

10' SECTION SHOWN

Item	Qty	Part No.	Description
1	1	80522600	3' Section Weldment
	1	80514300	4' Section Weldment
	1	80513500	5' Section Weldment
	1	80512700	6' Section Weldment
	1	80518400	7' Section Weldment
	1	80516800	10' Section Weldment
2	1	10153500	3' Weather Cover
	1	10152700	4' Weather Cover
	1	10151900	5' Weather Cover
	1	10150100	6' Weather Cover
	1	10149300	7' Weather Cover
	1	10147700	10' Weather Cover
3	4	10171700	3' - 10' Clamp

Stand Box

Repair Parts

Item	Qty	Part No.	Description
1	1	10176600	Plate .188 x 6.000 x 21.188
2	2	19695600	Leg Extension
3	2	19696400	Lower Leg

